

Orienting the SMART Board Interactive Whiteboard

Orientation ensures your touch is registered accurately when you are using the SMART Board™ interactive whiteboard. If you press the interactive whiteboard with your finger and your cursor appears somewhere other than where you are pressing, try orienting the interactive whiteboard.

Quick orientation


- 1 To orient the interactive whiteboard, press and hold the On-Screen **keyboard** and **right mouse** buttons simultaneously until the Orientation screen appears



Pen-tray buttons

Pen-tray buttons

- 2 Begin the orientation process at the upper left-hand corner of the Orientation screen. Press your finger or pen tool firmly on the center of each cross in the order indicated by the white, diamond-shaped graphic.

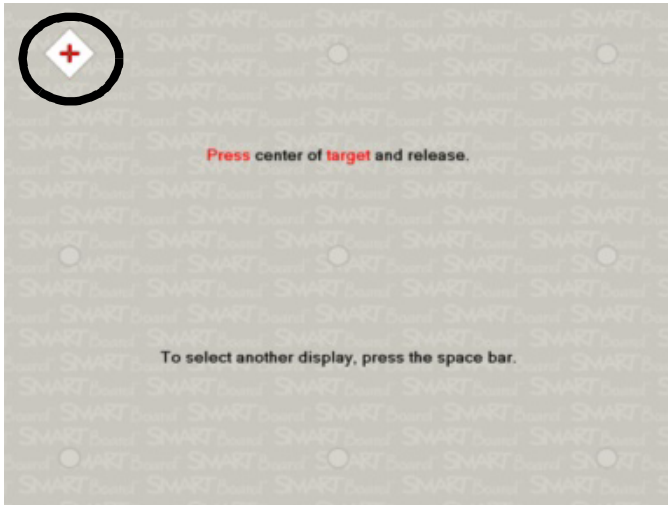

The Orientation screen

TIP: If you are not satisfied with the precision of a particular orientation point while orienting, press one of the pen-tray buttons or the left arrow key on your keyboard to redo the previous orientation point.

Changing orientation settings

Increase the detail of calibration for applications that require a greater amount of precision.

- 1 Press the **SMART Board** icon in the Windows Notification Area, and select **Control Panel** from the SMART Tool menu



Windows Notification Area

- 2 From the Control Panel window, press the **SMART Hardware Settings** button



[SMART Hardware Settings](#)

3 The SMART Hardware Settings window will open. Select **Orientation/Alignment Settings** from the drop-down menu



4 Select **Fine (20 Points)** and press **OK** to apply the new orientation and alignment settings

5 From the Control Panel window, press the **Orient** button to begin the orientation process

